





FT-G0\*-\*\*-22

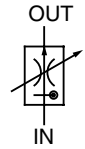

**FT Type Flow Control (and Check) Valve (With Pressure and Temperature Compensation)**

**0.05 to 106 ℓ /min  
21MPa**

CFT-G02\*-\*\*-22

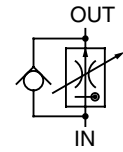

### Features

- ① Pressure compensation and temperature compensation mechanisms provide a stable control flow rate, even when fluid temperature fluctuates.
- ② A wider control flow rate range as well as easier minute flow rate adjustability than previous products.

### Specifications

Model No.	Nominal Diameter (Size)	Volume control flow rate ℓ /min	Maximum Working Pressure MPa(kgf/cm <sup>2</sup> )	Reverse Flow Rate ℓ /min	Cracking pressure MPa(kgf/cm <sup>2</sup> )	Weight kg	Gasket Surface Dimensions
(C)FT-G02-8-22 30-22	1/4	0.05 to 8 0.1 to 30	21{214}	50	0.1{1.0}	3.7	ISO 6263-AK-06-2-A
FT-G03-42-22 106-22	3/8	0.1 to 42 0.2 to 106		*120		7.9	ISO 6263-AM-07-2-A

Asterisk (\*) indicates values for auxiliary plate with check valve.

#### ● Handling

- ① In the temperature range of 20°C to 60°C, flow rate fluctuation is within ±5% of the standard flow rate at 40°C.
- ② In the pressure range of 1.0 to 21MPa {10.2 to 214kgf/cm<sup>2</sup>}, flow rate fluctuation is within ±5% of the setting flow rate.
- ③ Note that flow rate fluctuation exceeds the rated fluctuation amount slightly in the vicinity of the minimum control flow rate, due to changes in operating temperature and hydraulic fluid viscosity.
- ④ When controlling flow rates that are less than 0.2 ℓ /min, use with a filter that does not exceed 10μm.
- ⑤ For flow rate control, make sure that the pressure differential between the input port and output port is at least 1MPa {10.2kgf/cm<sup>2</sup>}.
- ⑥ The control flow rate is increased by clockwise (rightward) rotation of the control handle.

⑦ See the table below for installation hex socket bolts.

⑧ Use the following table for specification when a sub plate is required.

#### ● Sub Plate and Auxiliary Plate Application Table

Name	Model No.	Pipe Diameter	Recommended Flow Rate ℓ /min	Weight kg	Applicable Valve Type	Use With Sub Plate		
Sub Plate	MF-02X-10	3/8	30	2.2	(C)FT-G02*-**-22	-		
	MF-02Y-20	1/2	50					
Sub Plate	MF-03-10	3/8	42	3.3	FT-G03*-**-22	-		
	MF-03Y-20	3/4	75					
	MF-03Z-20	1	120					
Sub Plate with Check Valve	MF-03Y-C-22	3/4	75	5.7				
	MF-03Z-C-22	1	120	5.6				
Auxiliary Plate A with Check Valve	MCF-03-A-22	φ23	120	3.2				MF-03*-**

⑨ Though FT-G03 does not have a built-in check valve, a sub plate with check valve and auxiliary plate with check valve is used


in addition to the normal sub-plate. (Use the auxiliary plate in combination with the sub plate.)

Applicable Model	Bolt Size	Q'ty	Tightening Torque N·m(kgf·cm)
(G)FT-G02*-**-22	M8 × 55 ℓ	4	20 to 25{205 to 255}
FT-G03*-**-22	M10 × 75 ℓ	4	45 to 55{460 to 560}
With FT-G03 Auxiliary Plate	M10 × 110 ℓ	4	45 to 55{460 to 560}

Note) For mounting bolts, use 12T or equivalent.


### Understanding Model Numbers

**(C) FT - G 02 - 8 - (F) - 22**


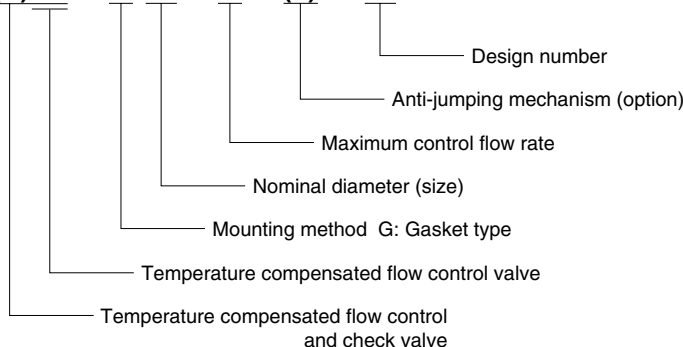


# Installation Dimension Drawings

(C)FT-G02-\*\*-22

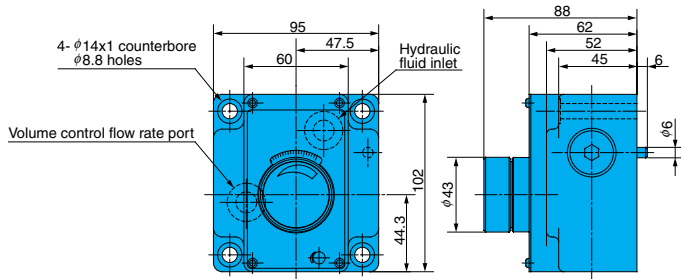


Sub Plate MF-02\*-\*

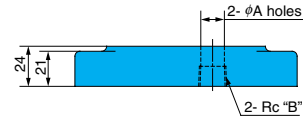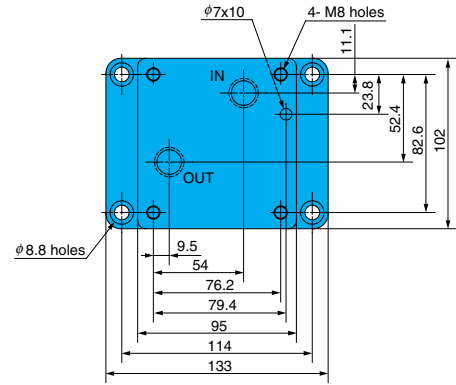


Sub Plate	A	B
MF-02X-10	14.7	3/8
MF-02Y-20	17	1/2

FT-G03-\*\*-22

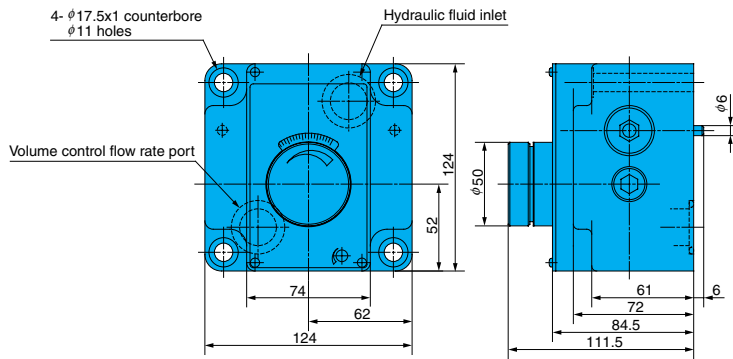


Anti-jumping mechanism


(C)FT-G02-\*-F-22

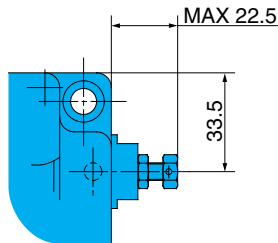


(C)FT-G03-\*-F-22

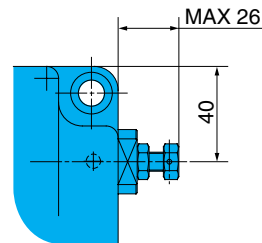

Sub Plate MF-03-10  
MF-03Y-20

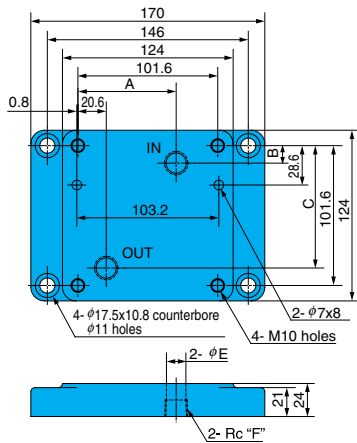


MF-03Z-20

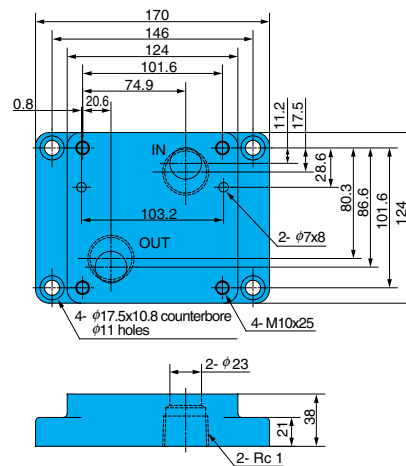


Sub Plate	A	B	C	E	F
MF-03-10	71.4	12.7	88.9	14.7	3/8
MF-03Y-20	74.9	11.2	86.6	23.0	3/4

Sub Plate with Check Valve MF-03\*-C-22

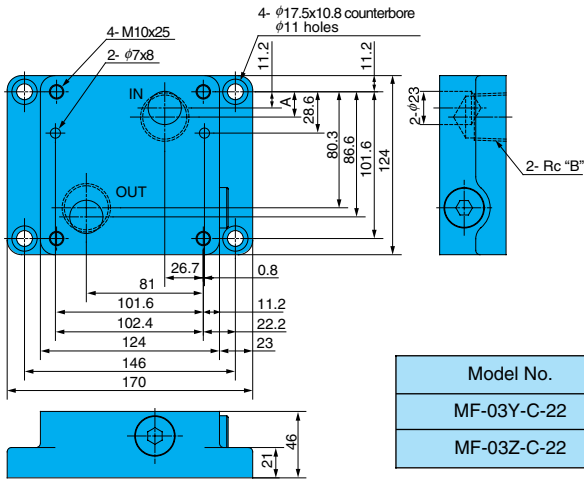

Model No.	A	B
MF-03Y-C-22	11.2	3/4
MF-03Z-C-22	17.5	1


Auxiliary Plate with Check Valve MCF-03-A-22

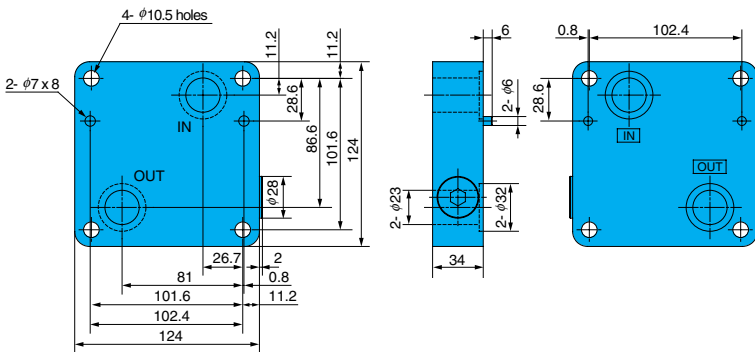


Performance Curves

Hydraulic Operating Fluid Viscosity 32mm<sup>2</sup>/s


Fluid Temperature – Control Flow Rate Characteristics

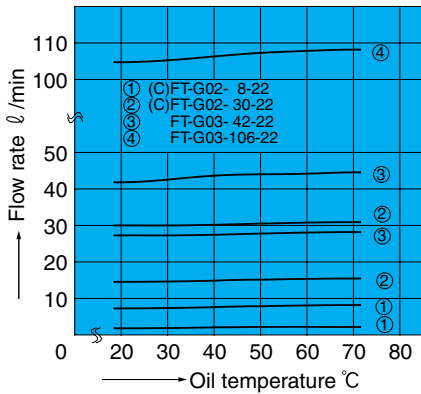


Pressure – Control Flow Rate Characteristics

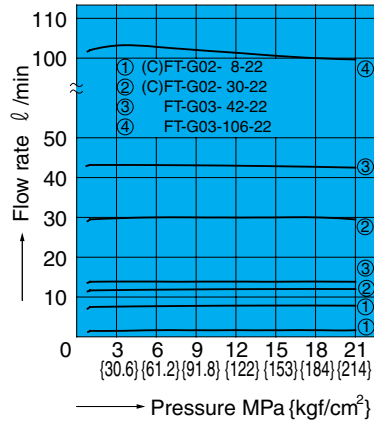

Scale – Control Flow Rate Characteristics

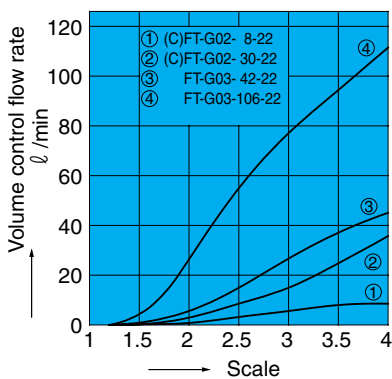


Pressure Loss Characteristics

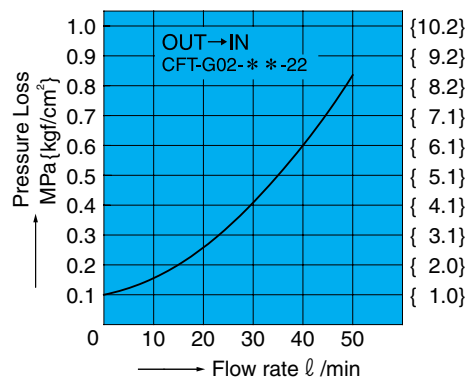

# Cross-sectional Drawing

Note) O-ring 1A/B-\*\* refers to JIS B2401-1A/B.

CFT-G02-\*-22

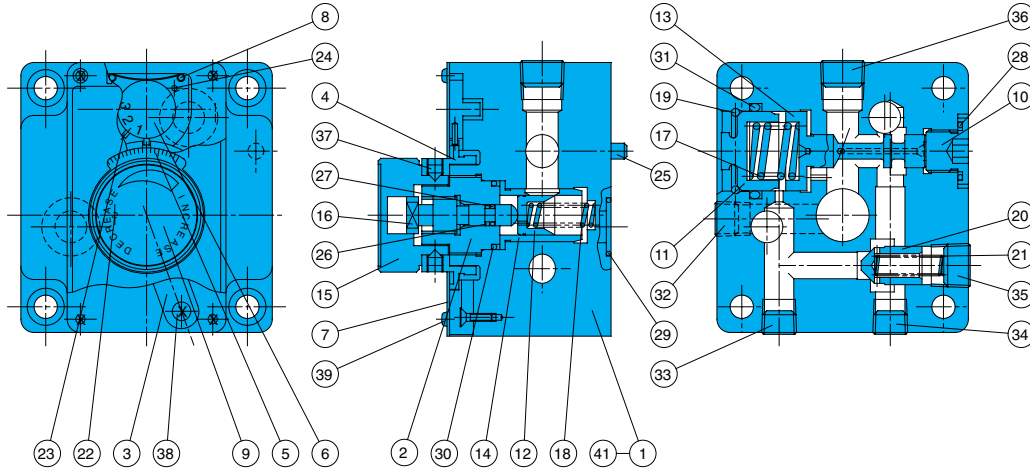


Part No.	Part Name	Part No.	Part Name	Part No.	Part Name
1	Body	15	Knob	29	O-ring
2	Retainer	16	Screw	30	O-ring
3	Stopper	17	Spring	31	O-ring
4	Dial	18	Spring	32	Plug
5	Plate	19	Snap ring	33	Plug
6	Plate	20	Poppet	34	Plug
7	Plate	21	Spring	35	Plug
8	Spring	22	Pin	36	Plug
9	Plate	23	Pin	37	Screw
10	Plug	24	Pin	38	Screw
11	Plug	25	Pin	39	Screw
12	Throttle	26	Backup ring	40	Washer
13	Piston	27	O-ring	41	O-ring
14	Sleeve	28	O-ring		

## Seal Part List (Kit Model Number FBBS-\*\*\*)


Part No.	Part Name	(C)FT-G02-*-22		FT-G03-*-22	
		Part Number	Q'ty	Part Number	Q'ty
26	Backup ring	T2-P5	1	T2-P5	1
27	O-ring	IB-P5	1	IB-P5	1
28	O-ring	IB-P18	1	IB-P20	1
29	O-ring	IB-P18	2	IB-P26	2
30	O-ring	IB-P22	1	IB-P26	1
31	O-ring	IB-P30	1	IB-P38	1
41	O-ring	-	-	IB-P20	1
Seal Kit Number		FBBS-G02-1A		FBBS-G03	

Note) 1. O-ring 1B-\*\* refers to JIS B2401-1B-\*\*. 2. Backup ring indicates JIS B2407-T2\*\*.

## Anti-jumping mechanism (C)FT-G02-\*-F-22

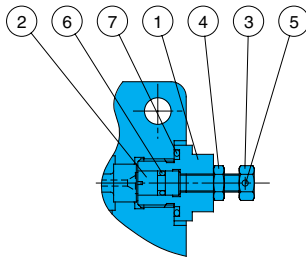


## (C)FT-G03-\*-22

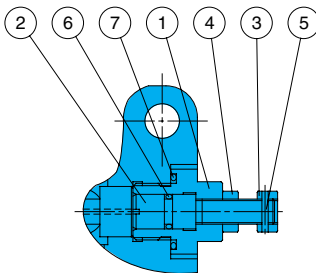

## Anti-jumping mechanism

Part No.	Part Name
1	Retainer
2	Bolt
3	Nut
4	Nut
5	Spring pin
6	O-ring
7	O-ring

## Sub Plate MF-03\*-C-22

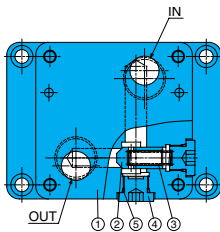


Part No.	Part Name	Part No.	Part Name
1	Sub Plate	4	Plug
2	Poppet	5	O-ring
3	Spring		

## List of Sealing Parts

Part No.	Part Name	Part Number	Q'ty
5	O-ring	1B-P18	2

## MCF-03-A-22

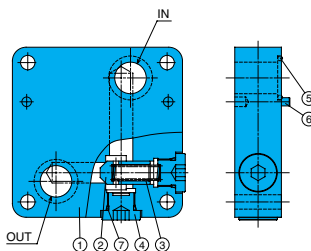

Part No.	Part Name
1	Sub Plate
2	Poppet
3	Spring
4	Plug
5	O-ring
6	Pin
7	O-ring
8	Screw

## List of Sealing Parts

Part No.	Part Name	Part Number	Q'ty
5	O-ring	1B-P26	2
7	O-ring	1B-P18	2